VESTEL

VESTEL SMART DOORBELL

USER MANUAL

VESTEL'LE OLUR
NEDEN OLMASIN?

Zorlu Holding kuruluşudur.

Dear Valued Customer,

Now that you chose our Vestel Smart Door Bell, you also bought a quality VESTEL product.

The life of your appliance will prolong if you perform necessary care and maintenance procedures.

We hope you enjoy using your appliance.

Important Safety Information

Please read the instructions in this manual carefully to familiarise yourself with the appliance quickly and use all the functions of your appliance to their fullest extent and keep this manual for future reference.

⚠ **WARNING:** Refers to the serious injury risks.

WARNING: Before you start to use your appliance, read this manual carefully in order to prevent any dangerous situations and risks of fire, electric shock and personal injuries.

Contents

Safety Warnings **1**
Safety Information to be Considered when Using the Appliance 1
Adapter and Battery Information 2
Safety Information to be Considered when Performing Cleaning and Maintenance Procedures 2
Points to be Considered during Carrying and Transportation 2
Liability Limitation 2

Technical Specifications **2**
Simplified Declaration of Conformity 3

Package Contents **3**

General Appearance **4**

Installation **5**
Battery supply 5
AC supply (optional) 5
Wireless doorbell pairing 5
Installation of APP & Registration 6

Usage **7**
Function 7

Cleaning and Maintenance **7**

Storage **8**

Troubleshooting **8**

Safety Warnings

Safety Information to be Considered when Using the Appliance

- This user manual contains important information about the initial use, safety, intended uses, cleaning and maintenance of your appliance.
- Read the user manual carefully and follow the instructions.
- Keep this user manual in a safe place, and provide this user manual with the appliance in case you lend your appliance.
- This appliance is intended only for domestic use indoors and outdoors, it is not manufactured for commercial use.
- **WARNING**: Operation of the appliance for purposes other than its intended purpose may cause damage and dangerous conditions and renders the warranty void. Damages that may occur under these conditions are borne by the user.
- **WARNING**: Packaging materials can cause suffocation. Keep away from the reach of the children.
- Do not throw this product in fire as it may cause an explosion.
- Keep your appliance away from liquids and liquid containers such as vases, bottles, etc. Do not immerse the appliance in water.
- This appliance is not a toy.
- The suitable temperature for the product and accessories is -20˚C / 50˚C.
- Observe the national local regulations in the location where the device is to be used.
- **WARNING**: The product works with the specified charger (adapter) and battery. The adapter can be used to disconnect AC power if needed.
- Only use the brand-model adapter specified in the user manual supplied with the product. The manufacturer is not responsible for any problems arising from the use of any other adapter other than this adapter.

Adapter and Battery Information

Brand:	GPO POWER ADAPTOR
Model:	GTA92-0501000EU
Input:	100-240V~ 50/60Hz 0.3A Max
Charger Output:	USB-A 5.0V 0.01A - 5W
Battery Capacity:	6700 mAh

Safety Information to be Considered when Performing Cleaning and Maintenance Procedures

- Clean your appliance with a damp cloth and make sure that no water gets inside your appliance.
- Do not use chemical and abrasive cleaning materials when cleaning your appliance.

Points to be Considered during Carrying and Transportation

- During carrying and transportation, your appliance must be kept in original box in order to protect its components from damage.
- Keep the appliance in normal position during carrying.
- Do not drop the appliance during transportation and protect it from impacts.
- Failures and damages occurred during transportation after delivery of product to customer are not covered by warranty.

Liability Limitation

All technical information, user instructions, information about operation and maintenance of the appliance contained in this manual are the most up-to-date information available. Manufacturer does not assume any responsibility for damages and injuries that may occur as a result of non-compliance with the instructions given in this manual, using the product for purposes other than its intended use, unauthorized repairs, unauthorized modifications on the product and using spare parts that are not approved by the manufacturer.

Technical Specifications

Model	Vestel Smart Doorbell
Wi-Fi Protocol	IEEE 802.11b/g/n
Wi-Fi Frequency	2.4 GHz

Power supply	Battery or Adapter
Battery	6700mAh
Doorbell support	Using wireless doorbell
Compression Format	H.264/H.265
Viewing angle	130˚
Resolution	FULL HD 1920*1080P
Night vision support	YES
Micro SD card support	128GB
Motion detection	YES
Alarm	YES
Cloud storage support	YES
Remote access	YES
Two-way talk	YES

- Technical specifications and this manual are subject to change without prior notification.
- The values declared in the printed documents supplied with the product, on the markings on the product and on www.vestel.com.tr are the values obtained in the laboratory in accordance with the relevant standards. These values may vary depending on the usage and ambient conditions of the product.
- This appliance conforms to the WEEE regulation.

CE This product complies with the European CE Directive 2014/53/EU (Radio Equipment Directive).


This appliance conforms to Regulation on the Supervision of the Waste Electrical and Electronic Equipment.


Simplified Declaration of Conformity

In this document, VESTEL Ticaret A.Ş. declares that the appliance complies with the directive 2014 / 53 / EU. The full text of the EU declaration of conformity is available on the website:

https://www.vestel.com.tr/uygunlukbeyandokumanlari


Package Contents

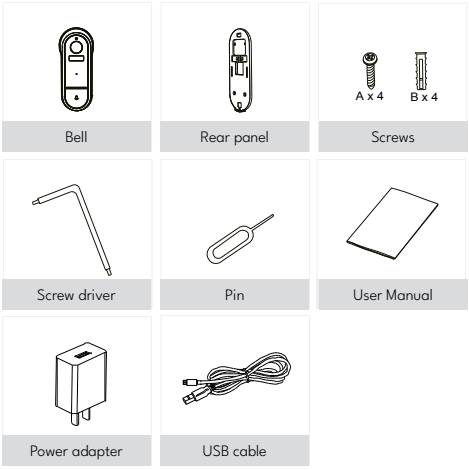


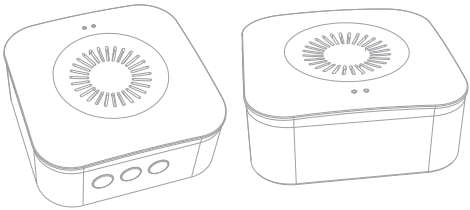

General Appearance

This illustration is intended for providing information on the components of the appliance only. Components may differ as per appliance model. Illustrations are representative.

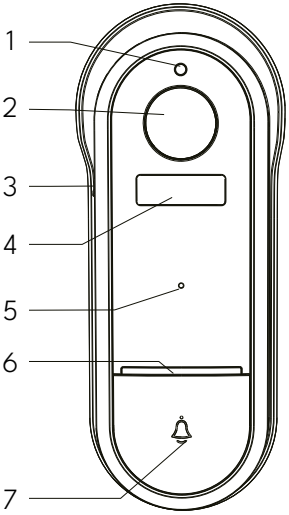

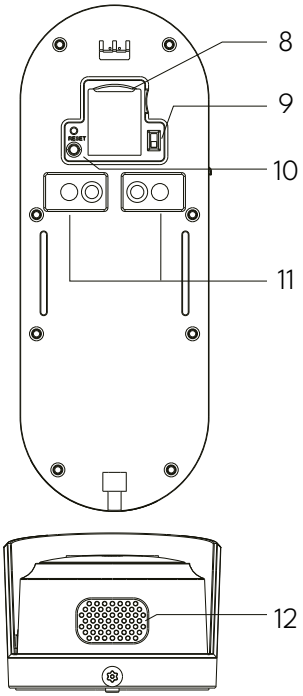

1. Photosensitive
2. Lens
3. Micro USB
4. Motion Sensor
5. Microphone
6. Status Light
7. Doorbell button
8. SD card slot
9. Power
10. Reset
11. External power port
12. Speaker


Power	DC 5V/1A (USB); AC 12V-24V (AC supply)
Doorbell button	• Press the button to activate the doorbell
Status light	• Flashing red light: waiting for network connection (red), connecting to the network (fast) • Solid blue light on: the camera is working correctly • Solid red light on: camera is malfunctional
Microphone	Capture sound for video
SD card slot	Support for local SD Card storage (Max. 128GB)
Reset	Press and hold “reset button” for 5 seconds to reset the Smart Doorbell (if you have modified settings, they will return to factory defaults).

Installation


1. Use the included mounting bracket to fix the smart doorbell to a clean surface.

Battery supply

1. Fix the bracket to the wall with the mounting screws
2. Install the camera in the bracket and lock it with the screw.

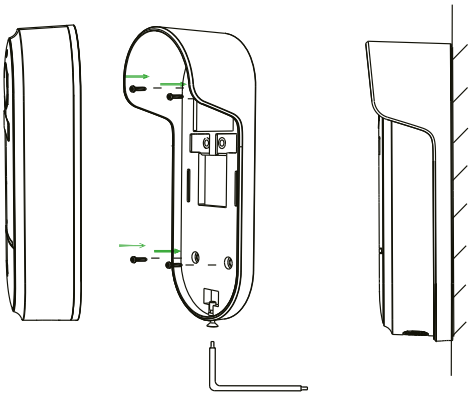

AC supply (optional)

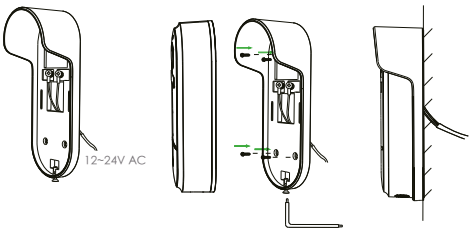



1. Prepare the accessories which are needed for AC supply.
2. Connect the bracket with the AC supply.
3. Install the camera in the bracket and lock it with the screw.

Wireless doorbell pairing

1. Short press "⚙" button (within 2 seconds) and the status light flashes red slowly and switches to the Wireless Doorbell pairing mode;

Note: During pairing mode, it will flash red.

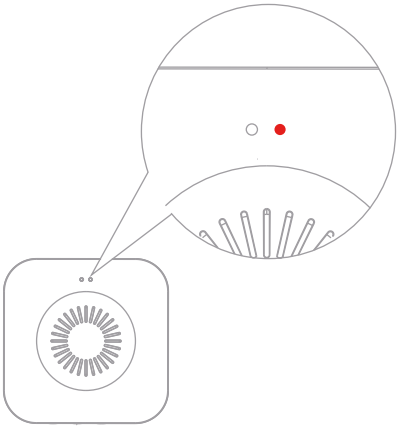

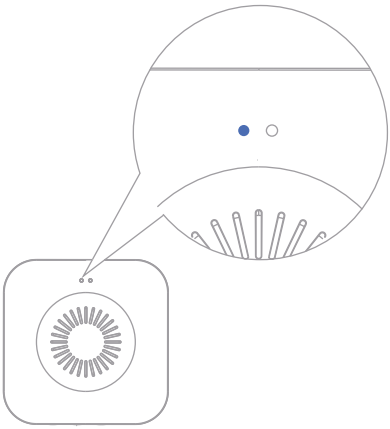

2. Press the doorbell button to pair; When the Wireless Doorbell status light turns off and the song plays automatically, the Wireless Doorbell pairing was successful.

Description:

1. Wireless Doorbell can be connected to up to eight doorbells
2. When the Wireless Doorbell pairing mode is enabled, press the "⚙" key again (within 2 seconds); The Wireless Doorbell will automatically exit pairing mode.
3. After successfully adding the Wireless Doorbell, the volume is automatically set to maximum. When it is at the minimum volume, it will return to the maximum volume after pressing "🔊".
4. Each time the "♫" button is pressed, it will play the next song along with the flashing blue light.

Note: Flashes blue when ringtone rings

Installation of APP & Registration

Enter the Add device option from the application you downloaded via the QR code.

- **NOTE:** The hardware platform of the equipment system must meet the following requirements.
- For the product application, your smartphone must support iOS and Android operating systems.
- Launch the app and register an account with your email address/mobile number and then log in to the app with the account registered.


1. Enter the Add device option from the application you downloaded via the QR code.

2. Product network connection is made.
3. "VESTEL SMART DOOR BELL" is selected from the Add device section.
4. Wifi password is entered.
5. Then, the QR code in the application is introduced to the Vestel Smart Doorbell.
6. Once the QR code is introduced into the Smart Bell, a warning sound is heard and the installation is completed shortly.
7. Users can re-name or share the device after Wi-Fi connection is finished.

NOTE: Make sure the appliance and smartphone are in the same network (2.4G supported only)

Setting up the Router

The router supports the 2.4GHz WiFi (5GHz is not supported), and is connected to the WiFi network. Please set the parameters of the router before connecting the WiFi network, and record the SSID and password of your WiFi.

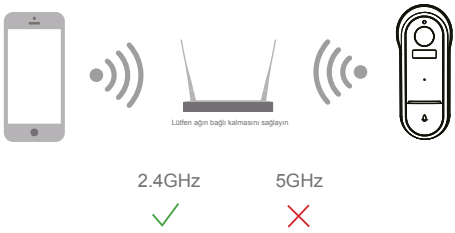

Usage

Function

- **Full-duplex audio**

When the visitor push the doorbell button, you will get a call. You can see and hear the visitor in your App from the doorbell if you answer.

- **Motion detection**

Motion sensors will notify you when movement is detected.

- **Shared device**

The doorbell device can be shared with friends, and friends can also preview online. There is no limit to the number of devices to be shared, but only 6 accounts are supported for online preview at the same time.

- **Record**

Record every moment by using high-capacity SD card storage.

- **Day & Night**

Powerful night vision means no interruptions, even in complete darkness.





Cleaning and Maintenance

- Clean the scale with a damp cloth and avoid water getting inside the scale.
- Do not use gasoline or thinner to clean the appliance.
- Do not wash the appliance with water.
- Do not use chemical/abrasive cleaning agents.

Storage

- Store your appliance in a cool, dry place after unplugging it.

Troubleshooting

When you notice an abnormal situation in your appliance, you may attempt to troubleshoot according to the descriptions given in the table.


If your appliance does not still operate properly, contact Vestel Call Center.

You may access the authorized service providers list and contact information from the web site.

All authorized service information is available in the Service Information System created by the Ministry.

Problem	Cause	Solution
The appliance cannot be previewed properly.	There may be a network problem.	Check if the network is normal, place the camera close to the router. If the problem is not solved, reset and add the appliance again.
Why does the product remain in the device list after reset?	Network reset.	When a reset is performed, only the network configuration of the camera is reset; the configuration of the application is not changed. Remove the camera and delete it from the app.
How to disconnect the camera network connected to another router?	Device removal problem from the app.	First remove and reset the device on the App and then configure the device again by the App.
Why does the device not recognize the SD card?	It could be a power failure or SD card format problem.	It is recommended to plug in SD card after power failure. Check if the SD card is being used normally and make sure the format is FAT32. Also, the SD card cannot be detected if the internet connection is not good.
Why don't I get notifications on the app on my mobile phone?	Notifications are turned off.	Make sure that the application is running on the phone, that the corresponding reminder function is turned on, that the message notification and authorization confirmation on the mobile phone are turned on.

Disposal of the Appliance in an Environmental Friendly Manner

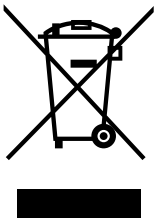

This marking either on the product or the information label indicates that this appliance should not be disposed with other household wastes at the end of its life. To prevent possible harm to the environment and human health due to uncontrolled waste disposal, please separate this product from the other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. For information about where and how you can recycle this appliance in an environmentally friendly manner, please contact the dealer you purchased the product from and relevant local organizations. This product should not be mixed with other commercial wastes for recycling.

Recommendations on energy saving

- Turn off the appliance when not in use.
- Unplug the appliance from the outlet.

Packaging Information

Packaging material of product is totally recyclable. Do not discard packaging material with household or other wastes, discard it to packaging material collecting point determined by local government.

Customer's Elective Rights

The customer, in case the product is found defective as per the terms of Protection of the Consumers Act, No 6502, even though the defect occurs at a later time, have the following rights for two years following the date of delivery to the customer:

1. Return the sold product and cancel the agreement,

2. Keep the sold product and request a discount on the sales price in proportion to the defect, (one of these elective rights can be used against the Seller),

3. Unless an excessive cost is required, request a free-of-charge repair of the product, with all costs belonging to the Seller,

4. If it is possible, to replace the product with an equivalent one free-of-defect, (one of these elective rights can be used against the Seller, manufacturer or importer).

If the free-of-charge repair or replacement with an equivalent product free-of-defects will cause a disproportional drawback for the seller then the consumer can use his right to cancel the agreement and request a discount on sales price in proportion to the defect.

The customer can file their complaints and rejections at Consumer Courts and Consumer Arbitration Committees.

Manufactured in:

Hangzhou Meari Technology Co., Ltd

Address :Room 505, Building 1, No. 768 Jiang Hong Road, BinJiang District, 310051,China

Manufacturer/Importer:

Vestel Ticaret A.Ş.

Address : Levent 199 Büyükdere Cad. No:199 34394 Şişli/ İSTANBUL-TURKEY

Phone : 0850 222 4 123

E-Mail : vmh@vestel.com.tr

www.vestel.com.tr/destek

WhatsApp: 0850 222 4 123